



This phone can be setted through the LCD or web page.  
If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

## Check Your Package Contents

These are the items included with your C58/C58P IP Phone purchase:



VoIP Phone C58/C58P



Handset



Power adaptor



Handset cord



Quick Installation Guide




Base bracket



Ethernet Cable

## 2 The Appearance of Product

Front view and keypad function:

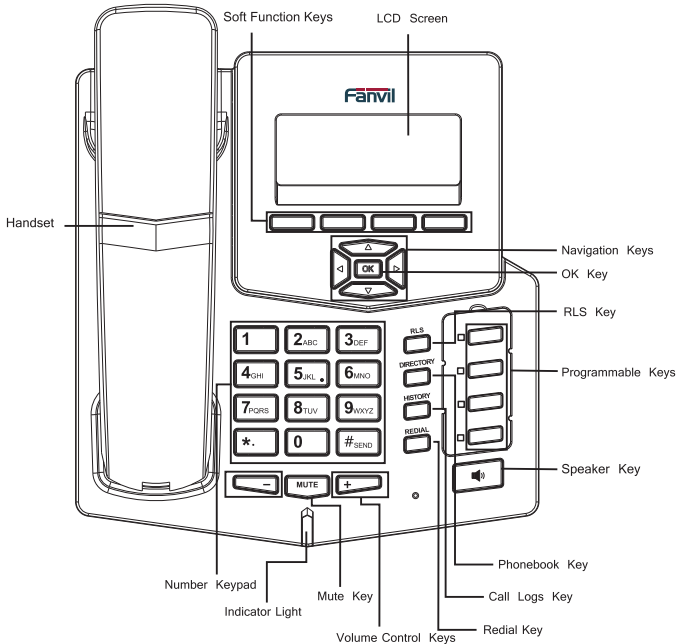


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

Key	Text Mode		Key	Text Mode	
	Normal(ABC)	Numeric(0-9)		Normal(ABC)	Numeric(0-9)
<b>1</b>		1	<b>7</b> <sub>PQRS</sub>	PQRSpqrs	7
<b>2</b> <sub>ABC</sub>	ABCabc	2	<b>8</b> <sub>TUV</sub>	TUVtuv	8
<b>3</b> <sub>DEF</sub>	DEFdef	3	<b>9</b> <sub>WXYZ</sub>	WXYZwxyz	9
<b>4</b> <sub>GHI</sub>	GHIghi	4	<b>0</b>		0
<b>5</b> <sub>JKL</sub>	JKLjkl	5	<b>*.</b>	#@,./:\$%& ( )<>[]~!_=-~?	*
<b>6</b> <sub>MNO</sub>	MNOmno	6	<b>#</b> <sub>SEND</sub>		#


# 3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

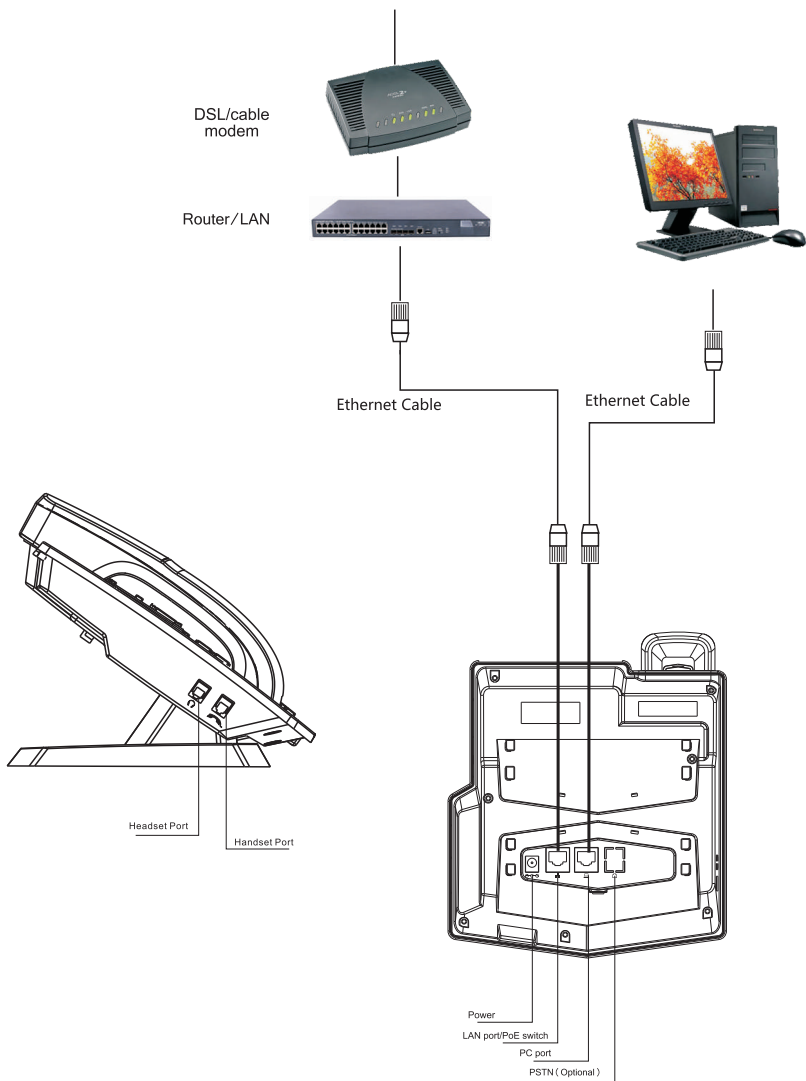


# 4 IP Phone Setup Menu(1)

Network mode Settings diagram:

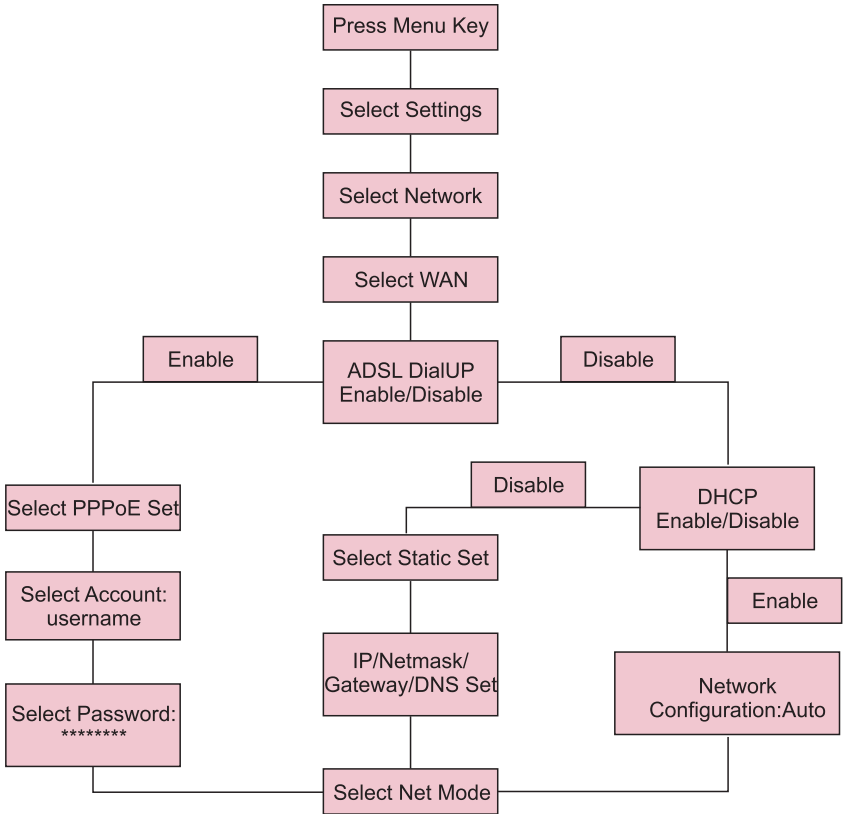

# 5 IP Phone Setup Menu(2)


The menu of phone Structure:

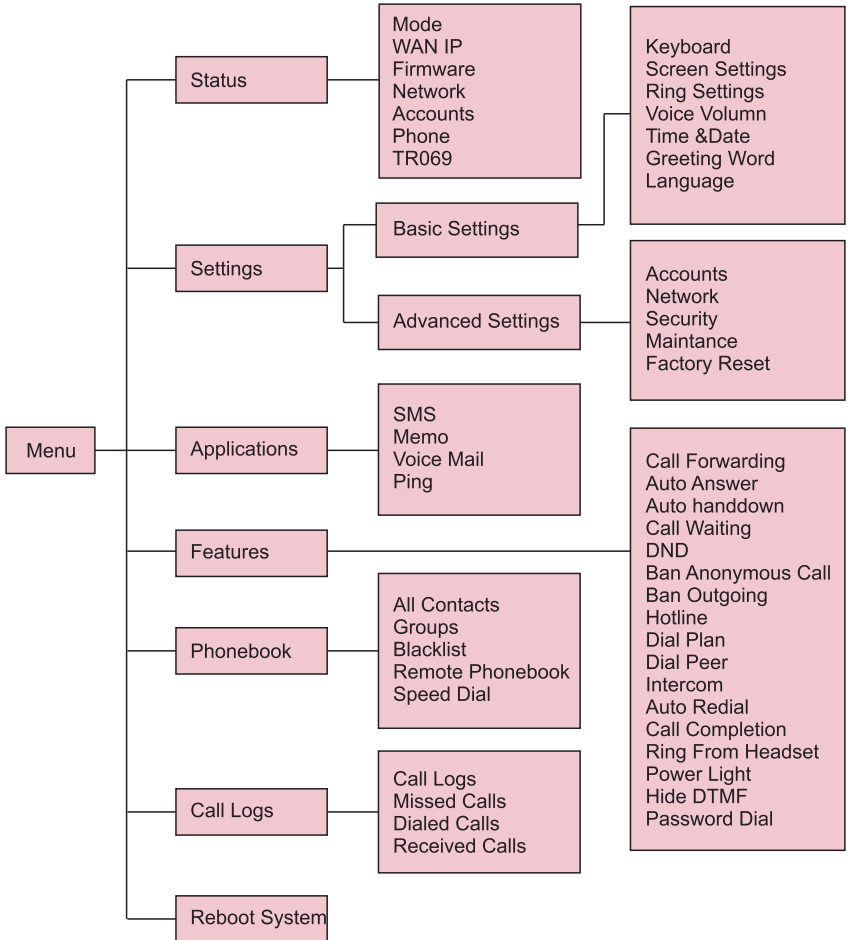


# 6 Configuration(1)

## Web Login

 
The configuration menu of C58/C58P can be accessed using the convenient and user-friendly interface of a web browser.



Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g. http://192.168.1.16) to visit the Web page and make some configuration.

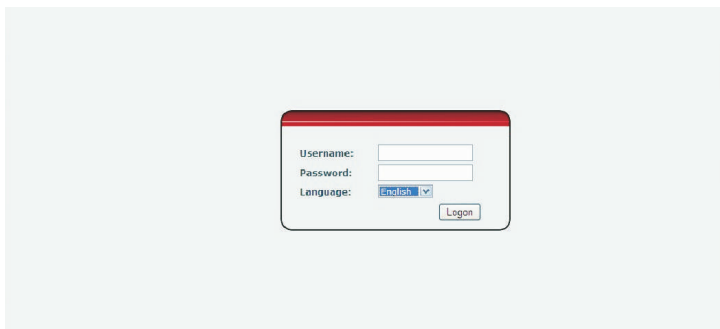

Enter the username and password, and both of the default username and password are "admin". After your login, the Web page will be displayed as follows.

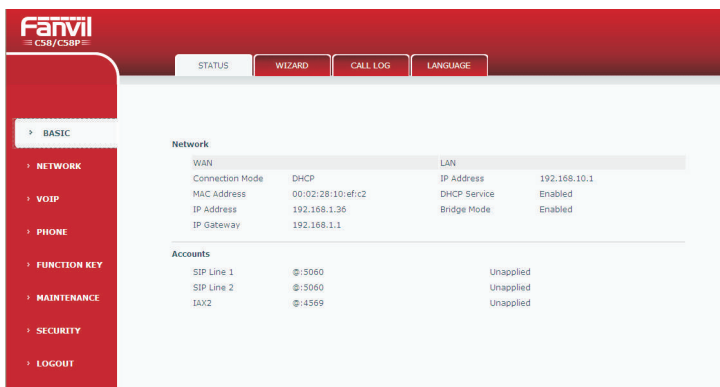

# 7 Configuration(2)

## Network - PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE. (Most DSL users use PPPoE.)

The screenshot shows the Fanvil web interface with the 'NETWORK' menu selected. The 'WAN' tab is active, displaying the following settings:

- WAN Status:**
  - Active IP Address: 192.168.1.36
  - Current Subnet Mask: 255.255.255.0
  - Current IP Gateway: 192.168.1.1
  - MAC Address: 00:02:28:10:ef:c2
  - MAC Timestamp: 2012-4-5
- WAN Settings:**
  - Obtain DNS Server Automatically:  Enabled
  - Static IP:  DHCP:  PPPoE:
  - Service Name: ANY
  - User: user123
  - Password: \*\*\*\*\*
- 802.1X Settings:**
  - User: admin
  - Password: \*\*\*\*
  - Enable 802.1X:

## Network - Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

The screenshot shows the Fanvil web interface with the 'NETWORK' menu selected. The 'WAN' tab is active, displaying the following settings:

- WAN Status:**
  - Active IP Address: 192.168.1.36
  - Current Subnet Mask: 255.255.255.0
  - Current IP Gateway: 192.168.1.1
  - MAC Address: 00:02:28:10:ef:c2
  - MAC Timestamp: 2012-4-5
- WAN Settings:**
  - Static IP:  DHCP:  PPPoE:
  - IP Address: 192.168.1.179
  - Subnet Mask: 255.255.255.0
  - IP Gateway: 192.168.1.1
  - DNS Domain:
  - Primary DNS: 202.96.134.133
  - Secondary DNS: 202.96.128.68
- 802.1X Settings:**
  - User: admin
  - Password: \*\*\*\*
  - Enable 802.1X:



# 8 Configuration(3)

## Network - DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

The screenshot shows the Fanvil web interface with the 'DHCP SERVICE' tab selected. The left sidebar contains a menu with 'NETWORK' highlighted. The main content area is divided into three sections: 'WAN Status', 'WAN Settings', and '802.1X Settings'. 'WAN Status' displays IP address, subnet mask, gateway, MAC address, and timestamp. 'WAN Settings' includes options for automatic DNS, static IP, and DHCP, with 'DHCP' selected. '802.1X Settings' includes fields for user and password, and an 'Enable 802.1X' checkbox.

WAN Status	
Active IP Address	192.168.1.36
Current Subnet Mask	255.255.255.0
Current IP Gateway	192.168.1.1
MAC Address	00:02:28:10:ef:c2
MAC Timestamp	2012-4-5

WAN Settings	
Obtain DNS Server Automatically	Enabled
Static IP	<input type="radio"/>
DHCP	<input checked="" type="radio"/>
PPPoE	<input type="radio"/>

802.1X Settings	
User	admin
Password	*****
Enable 802.1X	<input type="checkbox"/>

## SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

The screenshot shows the Fanvil web interface with the 'SIP' tab selected. The left sidebar contains a menu with 'VOIP' highlighted. The main content area is divided into three sections: 'SIP Line', 'Basic Settings >>', and 'Codecs Settings >>'. 'SIP Line' shows 'SIP 1' selected. 'Basic Settings >>' includes fields for Status, Server Address, Server Port, Authentication User, Authentication Password, SIP User, Display Name, and Enable Registration. 'Codecs Settings >>' and 'Advanced SIP Settings >>' are also visible.

SIP Line	
SIP Line	SIP 1

Basic Settings >>	
Status	Registered
Server Address	192.168.1.2
Server Port	5060
Authentication User	4210
Authentication Password	*****
SIP User	4210
Display Name	
Enable Registration	<input checked="" type="checkbox"/>

Codecs Settings >>	
Domain Realm	
Proxy Server Address	
Proxy Server Port	
Proxy User	
Proxy Password	
Backup Server Address	
Backup Server Port	
Server Name	

Server Address  
Server Port  
Authentication User  
Authentication Password  
SIP user

SIP server address  
SIP server port number  
Username for logging into the SIP server  
Password for logging into the SIP server  
SIP phone number

## 9 Make a Phone Call

### IP Address:

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input #192.168.0.1# in the dialer interface, you will call the device whose IP address is 192.168.0.1.

### SIP Number:

Note: You have to register with SIP server to use SIP number.

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
- 2.Dial SIP number.

For example: Input 1866

- 3.Press "#" button or wait until the timer expires.

